

Control Panel Extension Cord E3000-PEX4

OPERATION MANUAL

Thank you for purchasing control panel extension cord E3000-PEX4. This control panel extension cord is designed for can be away placed from the E3000 CONTROLLER or SELECTOR main body.
Read this and E3000 CONTROLLER or SELECTOR Operation Manual carefully before use.

1. SPECIFICATIONS AND DIMENSIONS

Model	E3000-PEX4
Applicable Unit	E3000 CONTROLLER, E3000 SELECTOR
Front Panel Dimensions	73mm × 73mm
Attachable Pitch	63mm × 63mm
Attachable Hole Dimensions	φ 3.4mm
Cord Length	4m

Standard Accessories

- Mounting Screw • 4pcs.
- Operation Manual • 1set.
- Flange Nut • 4pcs.

2. INSTALLATION OF THE CONTROL PANEL EXTENSION CORD

⚠ WARNING


- ① Turn OFF the Main Power Switch of CONTROLLER or SELECTOR, and pull OFF the Plug of the Power Cord from Inlet box with Power Supply Fuses before Control Panel Extension Cord mounting.
- ② When attaching the Control Panel of CONTROLLER or SELECTOR, make sure that no oil or other contaminants are on the mounting surface.
- ③ Take care when selecting routing of Cord of Control Panel of the CONTROLLER or SELECTOR to insure that the Cord is not routed rear potential sources of RF noise.
- ④ Attach the Control panel of CONTROLLER or SELECTOR in manner to insure that the back of the circuit board of the Control panel of the CONTROLLER or SELECTOR does not contact any object or surface that could cause potential short circuits.

⚠ CAUTION

- ① It is capable to use the Control Panel Extension Cord both for CONTROLLER and SELECTOR.
- ② When attaching the Control Panel Extension Cord, please use the Control Panel of E3000 CONTROLLER or E3000 SELECTOR. For E3000 CONTROLLER, use the Control Panel of the E3000 CONTROLLER. For E3000 SELECTOR, use the Control Panel of the E3000 SELECTOR.

This Operation Manual can be used both for CONTROLLER and SELECTOR. When attaching Control Panel Extension Cord to CONTROLLER and SELECTOR, please this Operation Manual carefully before use.

- ① Remove the Control Panel Mounting Screw (4pcs.) and remove the Control Panel to front.

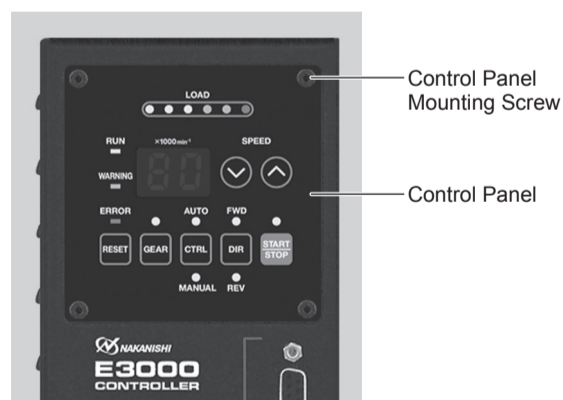

*Inset for E3000 CONTROLLER

Fig. 1

- ② Remove the connector of the rear of the Control Panel (Fig. 2) and remove the Control Panel (Fig. 3).

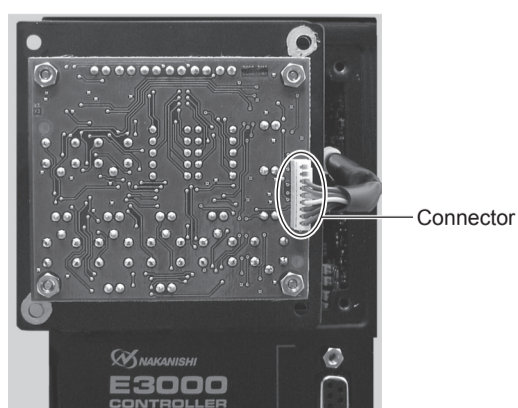


Fig. 2



Fig. 3

- ③ Connect the connector of Front Panel of the Control Panel Extension Cord to the connector of the CONTROLLER or SELECTOR (Fig. 4).
Attach the Front Panel of the Control Panel Extension Cord to CONTROLLER or SELECTOR by mounting screw (Standard Accessories). (Fig. 5)

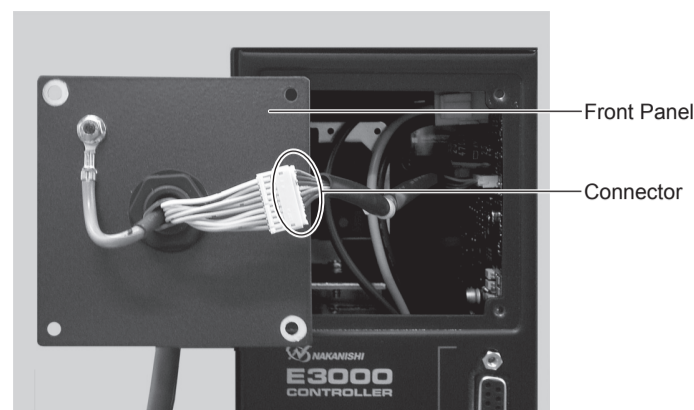


Fig. 4



Fig. 5

- ④ Connect the connector of the Control Panel Extension Cord to the connector of the Control Panel.

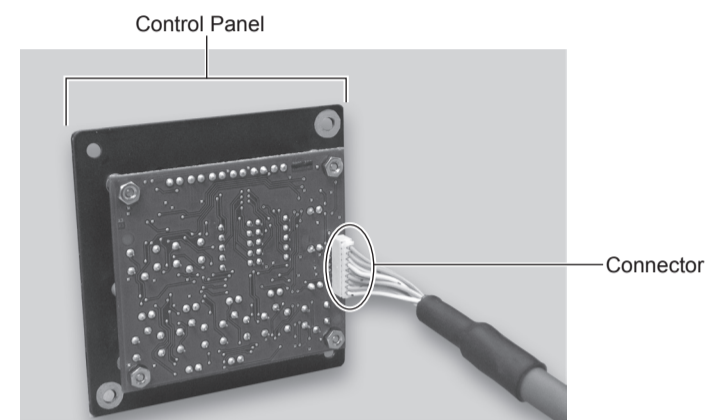


Fig. 6

- ⑤ Fasten the Control Panel for CONTROLLER or SELECTOR to your ordered box by using the Control Panel Mounting Screw removed in ①.



Fig. 7