

How to operate the Emax EVOlution



Ultra-precision brushless micro-grinder

1 Control Panel

Forward/reverse select switch

The direction of motor rotation can be selected.



Forward rotation (clockwise)



Reverse rotation (counterclockwise)



Power supply switch

Motor rotation speed display

P = 40,000 rotations/min

Speed control volume

The rotation speed can be easily adjusted.

LOAD meter

Displays the load status of the motor.

Motor connector B


Motor connector A



By choosing and pushing either **(a)**/**(d)**, the motor connected to the chosen A/B will rotate/stop. ***(a)** and **(d)** cannot be operated simultaneously.

2 How to change tools

- 1. Loosen the ring and remove the tool.
- 2. Replace the tool and tighten the ring until you hear a "click" sound.

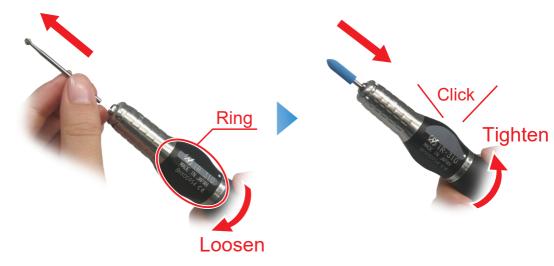

(3) How to start the control unit

1. Turn speed control volume completely to the left.

2. Switch ON the power.







How to start/stop the motor and adjust the rotation speed

* Example of when motor connector A is connected to the motor.

To start-

1. Press or the motor smart switch. The motor will start to rotate.



—To stop—

2. In order to stop the motor, press or the motor smart switch. The motor will stop rotating.

—To adjust the rotation speed -


1. Turn the speed control volume to adjust the rotation speed.



5 Convenient functions

—FIXPEED function—

FIXPEED allows everyone to set the speed of the motor in advance. The speed that is frequently used can be easily set at the touch of a button.

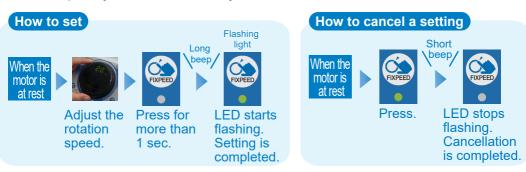

NAKANISHI INC. 📥

en.nakanishi-spindle.com

700 Shimohinata, Kanuma, Tochigi 322-8666, Japan

NSK America Corp.

www.nskamericacorp.com

1800 Global Parkway, Hoffman Estates, IL 60192, USA

ver.250616